


INSTALLATION GUIDE

DOUBLE GUADRAIL B3-3D

1

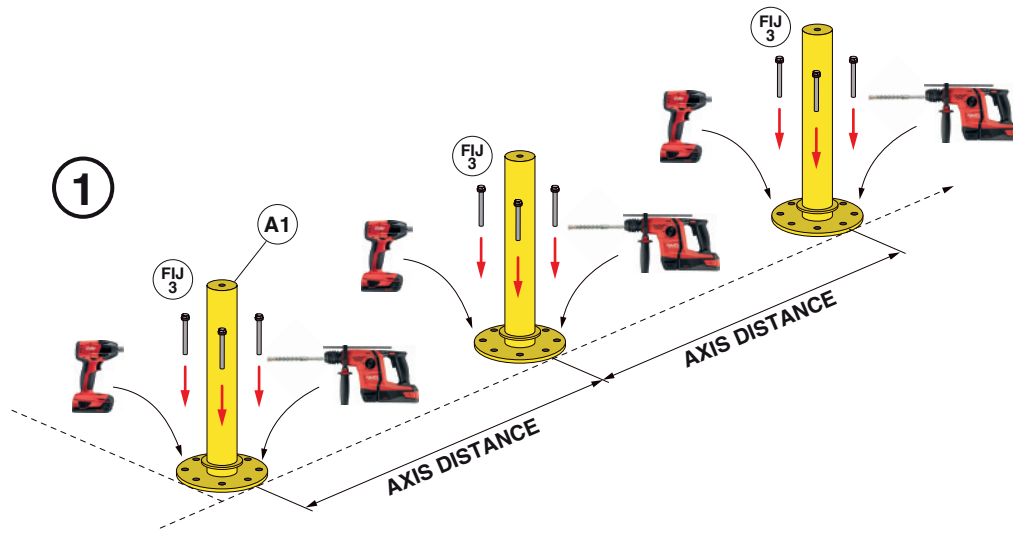

X4
minimum
4 anchors per base

USE


6 1/4" x 1/2" Drill Bit



1/2" x 3/4" Socket



2

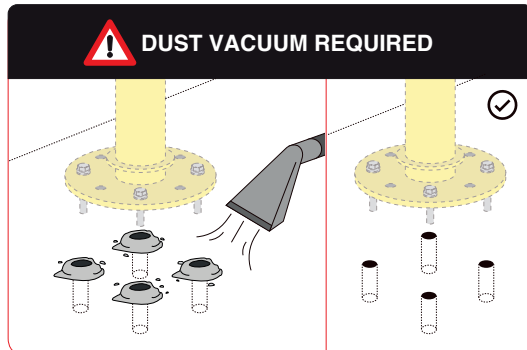

TOOLS



IMPACT WRENCH
HILTI SIW 22-A



ROTARY HAMMER
HILTI TE 6-A36


6 1/4" x 1/2" Drill Bit



1/2" x 3/4" Socket




30" Extension Socket

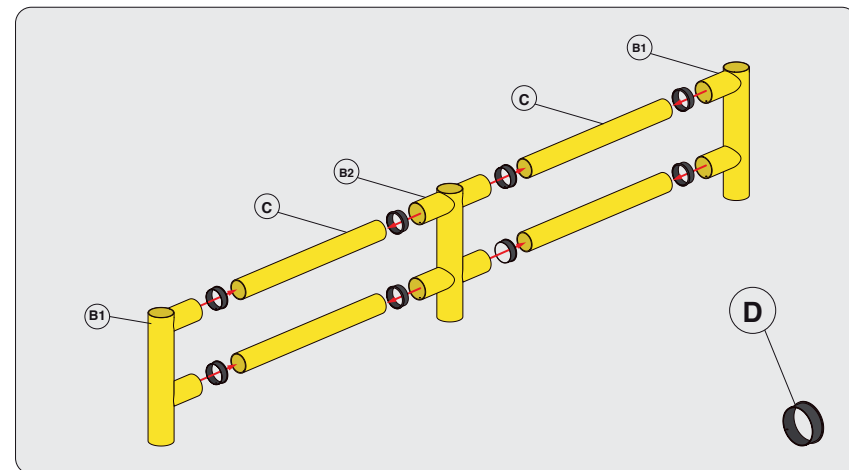


INSTALLATION GUIDE


DOUBLE GUADRAIL B3-3D

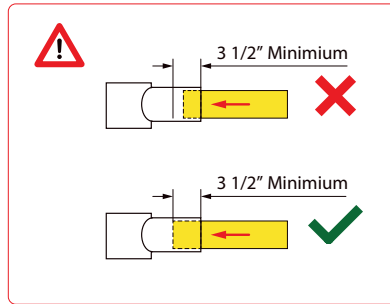

Insert crossbar at least 3 1/2"

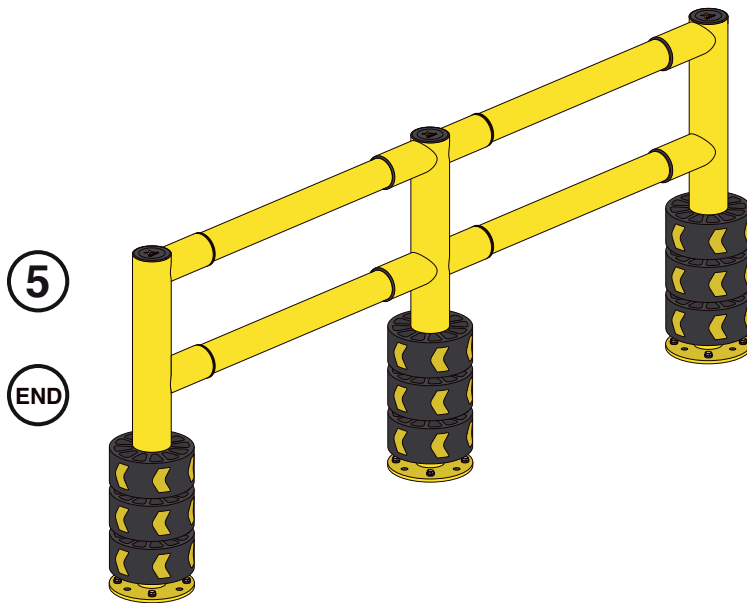

3

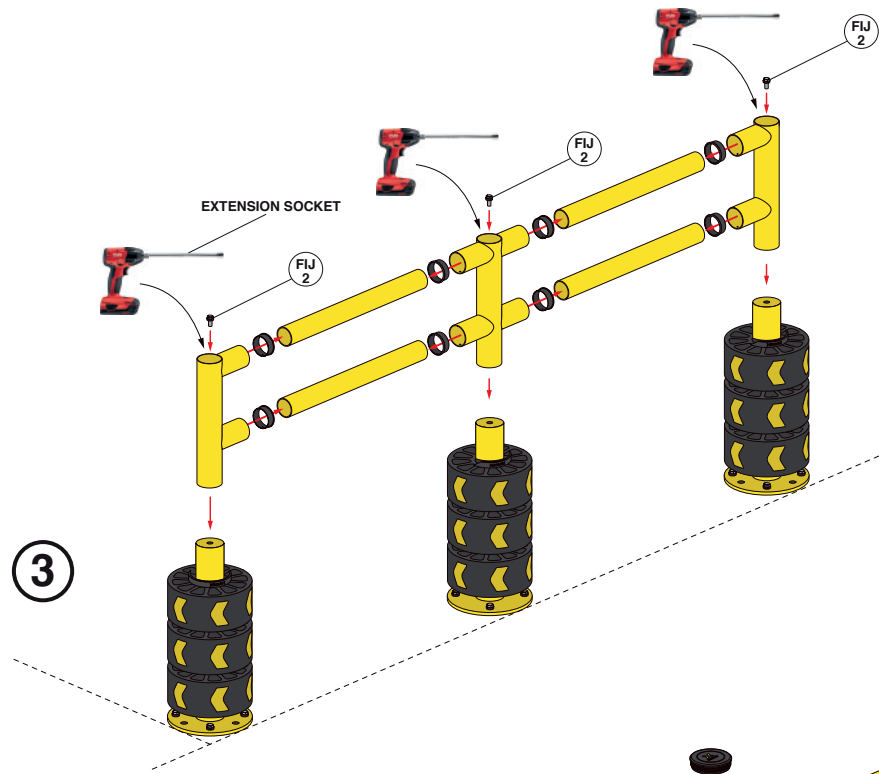

USE

30" Extension Socket



1/2" x 3/4" Socket



4

